

Silent Page Alpha Paging System



Operating Instructions



800-992-1000 x4

IMPORTANT SAFETY INFORMATION

Inter Page products are designed to operate safely when installed and used according to general safety practices. The following requirements should be observed at all times. Do NOT subject this equipment to:

- 1) Mechanical shock
 - 2) Excessive humidity or moisture
 - 3) Extremes of temperature
 - 4) Corrosive liquids
- This equipment is designed for indoor use only, unless expressly stated otherwise, and must not be used in classified Hazardous Areas, including areas containing explosive or flammable vapors, unless express authorization has been given in writing by the manufacturer.
 - Do not obstruct any slots or openings in the product. These are provided for ventilation to ensure reliable operation of the product and to protect it from overheating.
 - Only use a damp cloth for cleaning (not liquid or aerosol based cleaners), and ensure the AC adapter is removed from the unit prior to beginning the cleaning operation.
 - Removal of covers from the equipment must only be undertaken by authorized service personnel.

Warning!

Alteration or modification to any part of this equipment, without the prior written consent of the manufacturer, will invalidate all manufacturer Approvals and Warranties. No adjustments can be undertaken except by a qualified and licensed person as defined by the FCC Rules and Regulations. Operation of altered equipment can result in fines, imprisonment, and/or confiscation of such equipment

Liability

Inter Page and the importer and the manufacturer; do not accept any liability for any damage or injury howsoever resulting from misuse of this equipment. It is the responsibility of the user to

ensure that the equipment is operated in the manner for which it was intended and that it is the correct item of equipment for the required task.

Limited Warranty

With respect to the physical documentation and physical electronic circuitry of the Silent Page 2 tone only paging transmitter, the manufacturer warrants same to be free of defects in material and workmanship for a period of one year from the date of purchase. In the event of notification within the warranty period of defects in material or workmanship, the manufacturer and/or Inter Page Wireless will replace the defective parts and circuitry free of charge. The remedy for breach of this warranty shall be limited to replacement and shall not encompass any other damages, including, but not limited to, loss of profit, special, incidental, and consequential damages and similar claims.

Equipment Applications

It is the user's responsibility to determine the suitability of the Silent Page 2 paging system for any given application. Inter Page, or any of its subsidiaries, cannot provide specific advice, as each application will require independent evaluation. The following information, however, may be of benefit:

Equipment Testing

Range tests should be carried out at least once a week, more often when critical criteria apply. They should involve testing the unit past the limit of its required working range so as to ensure a measure of safety. Inter Page suggests that a log should be kept of all the test dates and the information gathered, together with the service records.

The frequency of the tests required will vary between applications. If a pager has been dropped or is worn by a person involved in an accident, the unit should be tested again before re-use. It must be stressed that the physical range tests are essential and any construction work or movement of plant or equipment, could alter the signaling capability of the unit.

Literature

Inter Page in conjunction with the importer and the manufacturer, operate a policy of continual improvement, and therefore reserve the right to modify or change the specifications without prior notice.

While every possible care has been taken in the preparation of this manual, Inter Page, the importer and the manufacturer shall not be liable for technical or typographical errors or omissions contained herein, nor for incidental or consequential damage arising from the use of this material.

Copyright © 2018

No part of this document may be photocopied or reproduced in any without the express permission of Inter Page Wireless, in writing.

Authorized Distributor:
Inter Page Wireless, Inc.

1241 SE Indian Street
Suite 102
Stuart, Florida 34997
Telephone: (800) 992-1000
Fax: (772) 266-9783

License

You are cleared to use this equipment within the USA under Inter Page Wiriness's license. The License number 0010574945 issued on 01/18/2014 which expires on 03/31/2024. Certain restrictions apply in respect of output power and antenna installations. If you have any questions contact Inter Page before installation and use. Alternative frequencies are available by formal license application (Form 600) via the FCC. These will not be subject to the same restrictions as the standard assigned license. You should obtain the FCC Rules and Regulations, Title 47, Part 80 to End, including Parts 90 and 95, available from the US Government Printing Office, GPO bookstore or FCC Office.

Package Components:

- 1. Silent Page Alpha paging transmitter**
- 2. Power Adapter (8.4 VDC, 1.3 Amp – regulated)**
- 3. Quarter wave whip antenna (with right angled BNC adapter)**
- 4. Operational Manual**

Installation and Operation



1. Connect the power supply cord to the **Silent Page** desktop paging system and plug power supply into an AC outlet.
2. Connect antenna to the back of the transmitter.
3. Connect keyboard to the back of the transmitter.
4. To alert a pager enter the desired pager number on the keyboard of the **Silent Page** transmitter and press **Enter**.
5. The screen will now display ENTER MESSAGE:

6. If you have alphanumeric pagers with your system enter alphanumeric message desired and press enter.

PREPROGRAMMED MESSAGES:

1. To add/change your preprogrammed messages, press escape once. When prompted enter password 1234 and press enter. From the main menu, arrow down to option 7 (Edit PPG Message) and press enter/send. PPG message: 01 will appear. Press enter/send to enter edit mode. Use the delete key to remove the default message before entering your new custom message. Once you enter the desired message press enter/send to exit the edit message mode. To change the other messages press the Up or Down arrow and select the message to edit.
2. Once all changes are made keep pressing the escape button until the transmitter saves and resets to paging mode.
3. **Caution: Do not make any other changes that may affect the Transmitter operation.**

4. To send a preprogrammed message: Enter the pager number and press enter/send. Press the Down Arrow once and ***preprogrammed message #*** will appear. Enter the preprogrammed message number using a two digit format. Press send after the preprogrammed message appears. Example: Enter pager #01 down-arrow and #01 (Go to Rm #1) press send.
 5. To set time and date, press escape once. Enter 1234 as password. Press 2 to enter time and date. Press 0 to change to AM. Press 1 to change to PM.
-

Preprogrammed Messages samples:

#01 Go to Rm #1
#02 Go to Rm #2
#03 Go to Rm #3

SILENT PAGE ALARM CONTACT PIN OUT

ORANGE/WHITE	CONTACT 1
ORANGE	CONTACT 2
GREEN/WHITE	CONTACT 3
BLUE	CONTACT 4
BLUE/WHITE	CONTACT 5
GREEN	CONTACT 6
BROWN/WHITE	CONTACT 7

BROWN = GROUND

***NOTE: THE WIRE COLORS ARE BASED UPON ON USING A STANDARD RJ45 (NETWORK) CABLE. THIS CABLE IS NOT PROVIDED WITH THE SILENT PAGE ALPHA.**

To program the contacts follow the instructions below.

1. Press the escape key on the keyboard.
2. Enter "1234" as the password.
3. Use the down arrow key to scroll to #5 (Edit Alarm Message) and press enter.
4. "Alarm Message: 1" will appear on the screen. Press enter. "Input Page To" will appear and it will be highlighted.
5. Press enter to input the pager number that the alarm message will go to. (I.E. "200")
6. After entering the pager number press enter. The screen will now show "Input Page To" and "Input Message". Use the down arrow key to highlight "Input Message" and press enter.
7. Delete the default message and enter a message of your choosing. Press enter once the message is complete.
8. Press the escape key once. Use the up or down arrows to cycle through the other six alarms. To edit the alarms repeat steps 5 through 7.

9. Once all alarms are programmed press the escape button until the words “Saving Pager Data” appear on the screen. The Silent Page Alpha will now save all of the information and reboot back to the normal operation mode.

Please call Tech Support at 1-800-992-1000 x4 if further assistance is needed.